


2019MY Ascent (TR8) Cargo Net Installation Instructions Part Number: F551SXC000

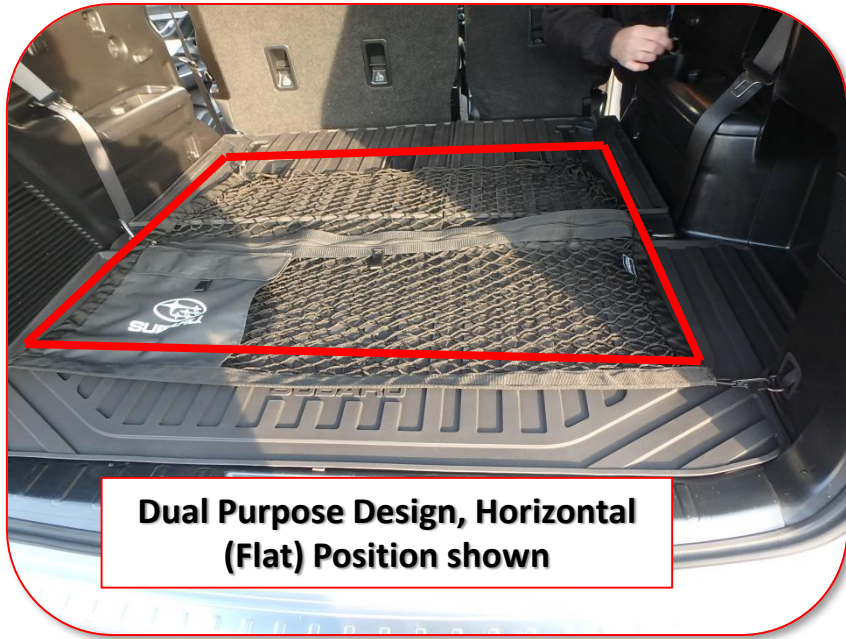


STOP Ensure the VIN matches the work order and the vehicle date is in the lock period and there are no "Holds" on the vehicle for any reason. Ensure the vehicle calls for the accessory installation. Inspect the area where the accessory is to be installed and the vehicle for damages, etc. prior to all work.

Port Installations use the Vertical Position Installation Instructions

CAUTION: ACCESSORY INSTALLATIONS PERFORMED BY UNTRAINED PERSONS COULD RESULT IN SERIOUS INJURY TO THOSE PERSONS OR TO OTHERS. Subaru Work Instructions are intended for use by professional accessory installers ONLY. They are written to provide step by step accessory installation instruction for a fast paced production environment. Properly trained accessory installers have the equipment, tools, safety instructions and know-how to do the job correctly and safely. Included in this information are the use of "special" accessory installation fixtures and templates that are not available to the Retailers or general public. Please refer to the Retailer Installation Instructions found in Subaru Tech Info System (STIS).

2019MY Ascent (TR8) Cargo Net Installation Instructions Part Number: F551SXC000

Inspect the Rear Cargo Net for defects.

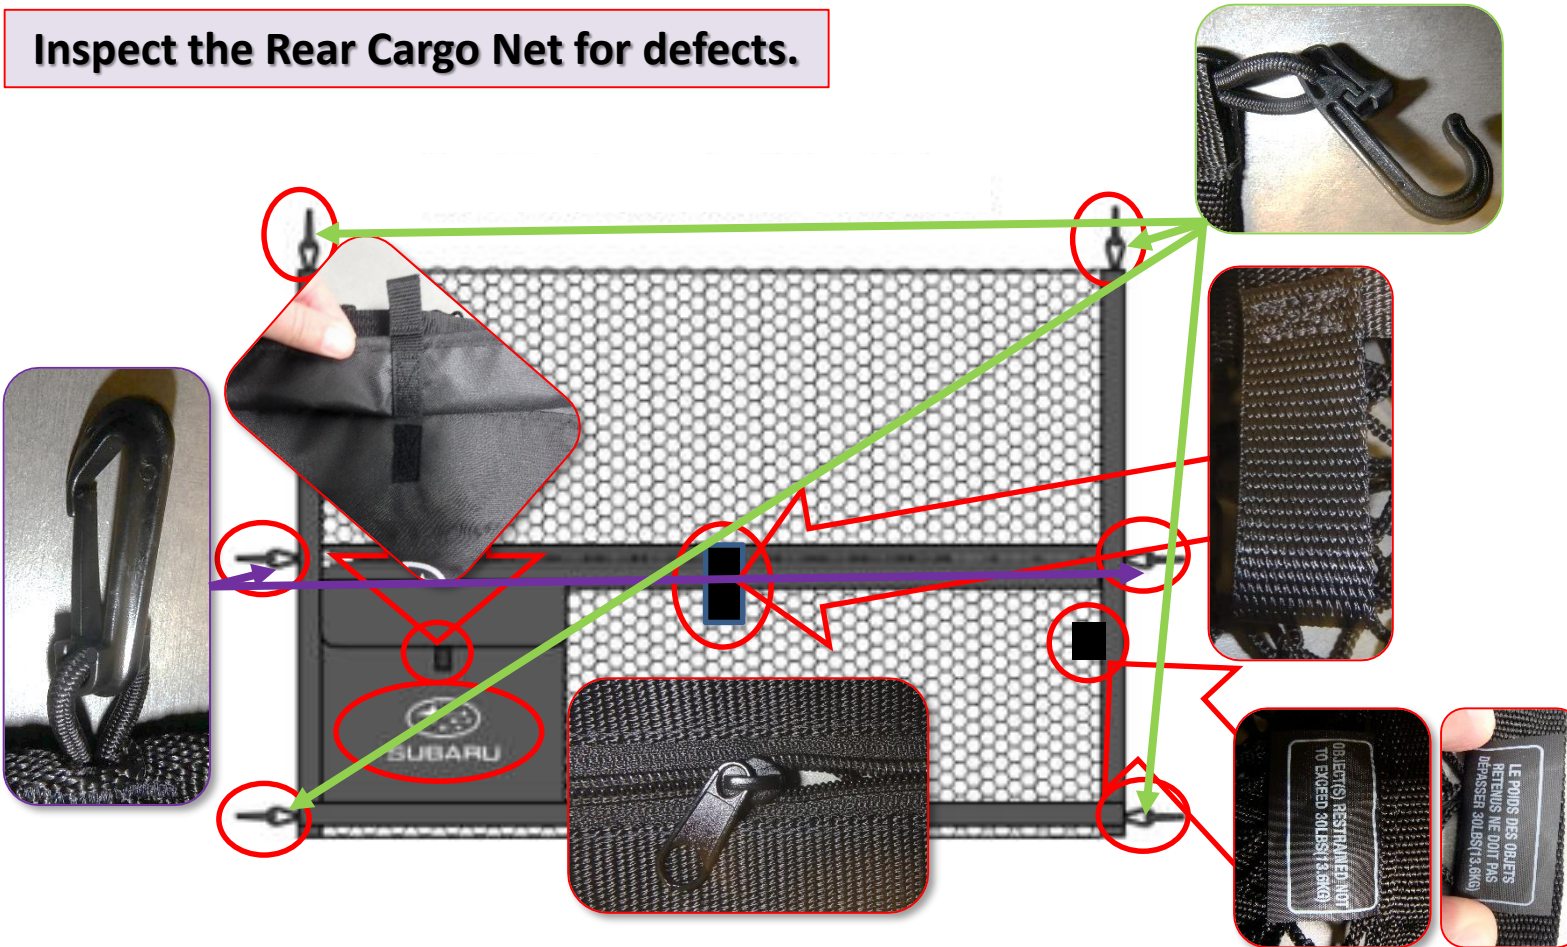

	Stop: Damage may occur to the vehicle/part. Do not proceed until process has been complied with.
	Work Hazard Analysis (WHA): Operator safety-Use caution to avoid risk of injury.
	Caution: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.
	Revision Mark/Highlight: This mark highlights a change in installation with respect to the previous issue.
	Work Instruction Training (WIT): Key point that designates an important step to ensure the quality of the installation.
	Recycle: Item to be recycled.
	Safety Torque - This mark indicates that a torque is related to safety

2019MY Ascent (TR8) Cargo Net Installation Instructions Part Number: F551SXC000

Port Installations use the Vertical Position Installation Instructions

Install Cargo Net in Vertical (Rear Facing) Position

- Fold the cargo net in half as shown.
- Locate the (2) locking cargo net hooks at the top and fasten to the OE shopping bag hooks on the LH and RH sides of the rear cargo area.
- Ensure the rear net pull tab and pocket are facing to the outside as shown.
- Locate the (2) per side lower cargo net hooks and attach the hooks to the OE metal cargo area holders.




⚠ Ensure all hooks are facing down

2019MY Ascent (TR8) Cargo Net Installation Instructions Part Number: F551SXC000

Install the Cargo Net in Horizontal (Flat) Position

- Fold down flat the third row seats.
- Install the net by attaching the (4) hooks as shown to the lower cargo hooks in (4) locations.
- Ensure the hooks are in the correct position as shown.


⚠ Note: the locking hooks located in the center of the cargo net in the vertical position are not used.

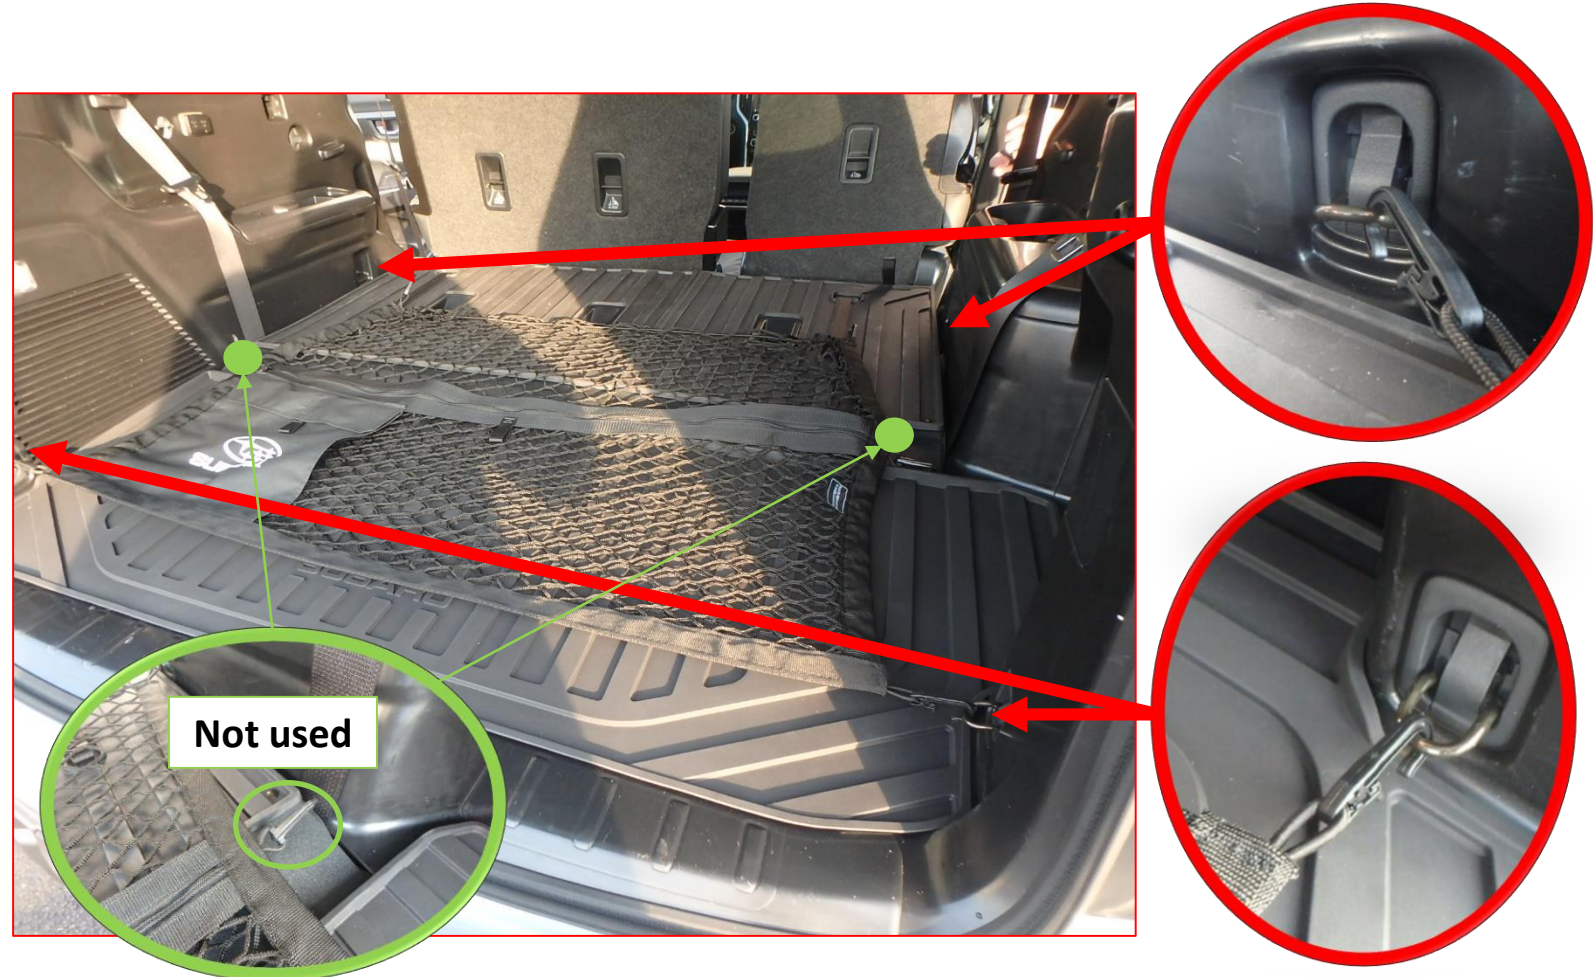

2019MY Ascent (TR8) Cargo Net Installation Instructions Part Number: F551SXC000

Work Validation / Check your work

- Ensure no damages to the net hooks.
- Ensure no damages to the cargo net.
- Ensure no damages to the cargo net label.
- Ensure no damages to the OE shopping bag hooks on the LH and RH sides of the cargo area.
- Ensure no damages to the vehicle cargo metal hooks.
- Ensure the rear net pull tab is facing to the outside.
- Ensure the zippered compartment is closed.
- Ensure no scratches or damages to the plastic panels rear gate, etc.
- Ensure all hooks are facing down.

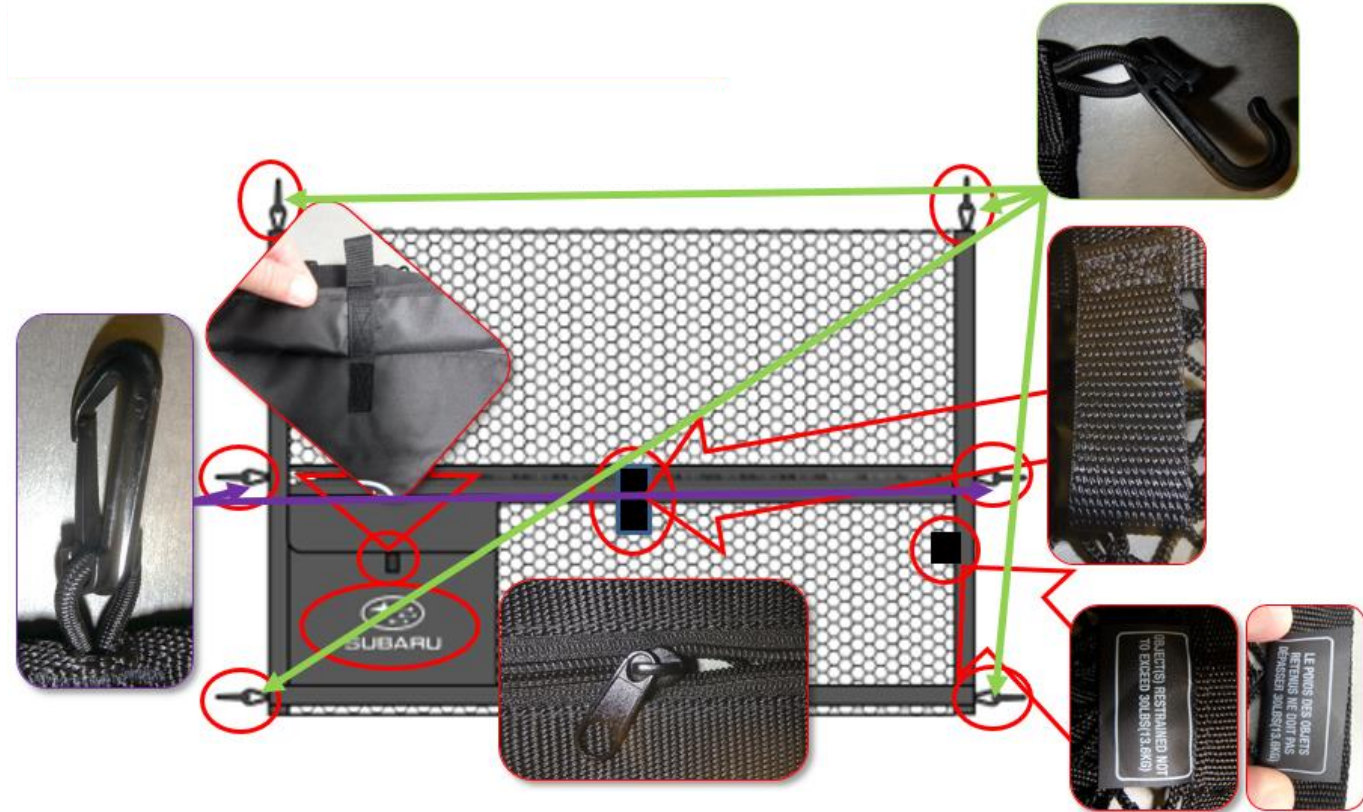

Ascent Cargo Net Identifying Characteristics