



FOG LAMP KIT

INSTALLATION INSTRUCTION

IMPREZA (2023MY and after)
CROSSTREK (2023MY and after)

PART No. H4510FN000 (IMPREZA)
H4510FN010 (CROSSTREK)



IMPORTANT

1. The installation should be carried out by an authorized Subaru dealer.
2. Pay special attention not to damage vehicle components when removing / installing them.
3. Route the wiring so that it cannot be abraded against any sharp edges.
4. Refer to the vehicle service manual.
5. Check that the vehicle's electronic devices are operating normally. Be sure to make note of the contents of the memory of electronic devices such as the preprogrammed radio channels.

CROSSTREK Model



IMPREZA Model



Components

①




②

CROSSTREK Model

IMPREZA Model



③

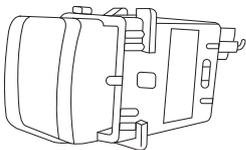

④



⑤



⑥



⑦




Tools



10mm




[+]




10mm



[-]




1

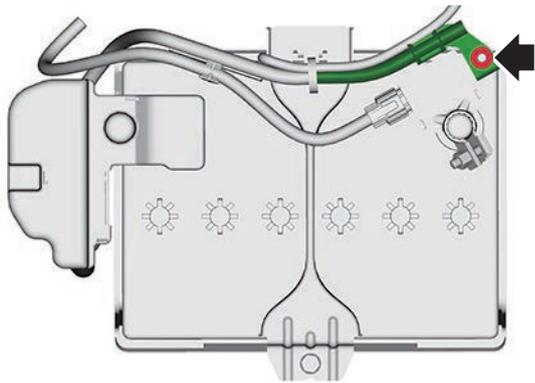


After removing the battery terminal, wait 60 seconds before proceeding to the next procedure.


2

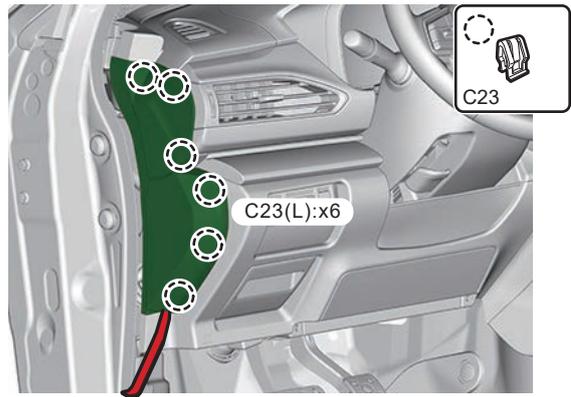

3

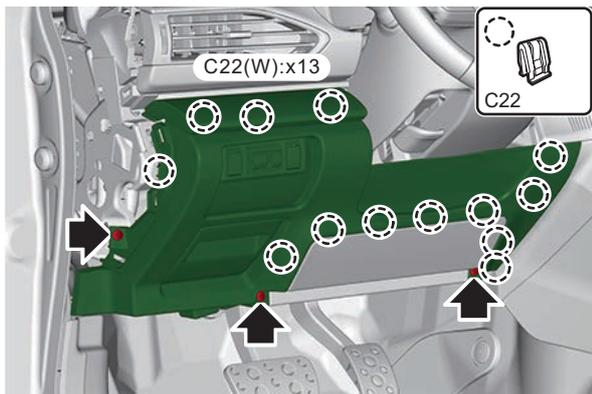

4

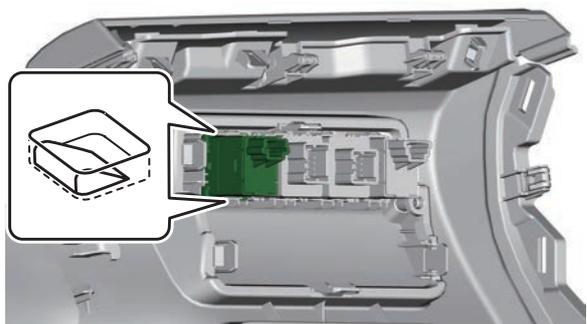


Rear of lower instrument panel shown.


5




6

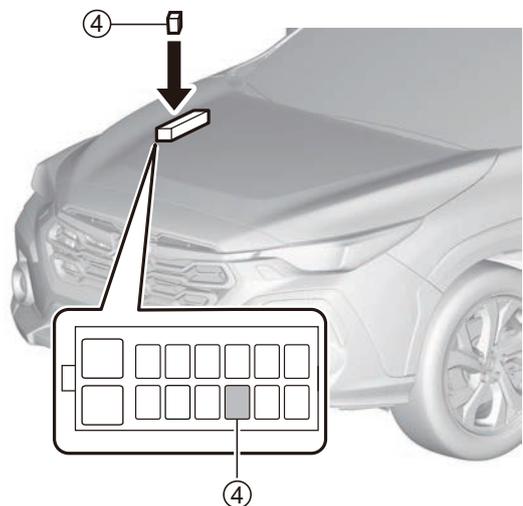

7

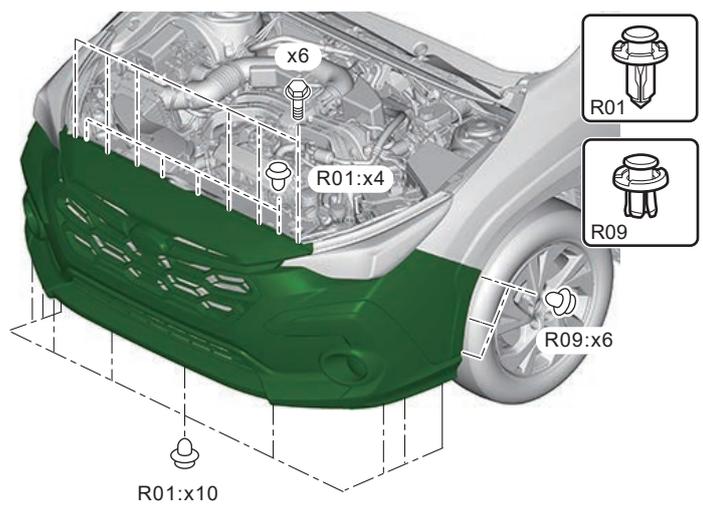

8

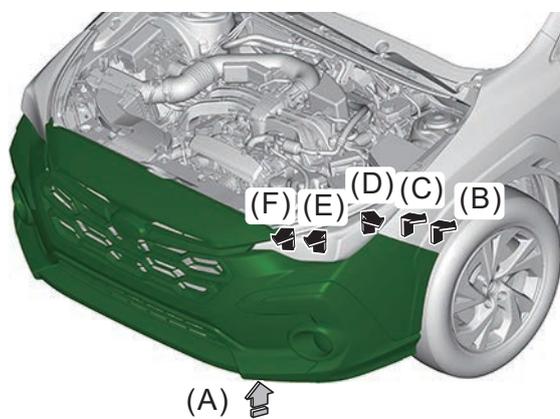


While pushing up the lower side (A) of the bumper face front, release the engagement in the order from (B) to (F).




Do not pull forcibly. It may damage the flange section on the bumper face front side when it comes off from the claws of the bumper bracket.

9

CROSTREK Model

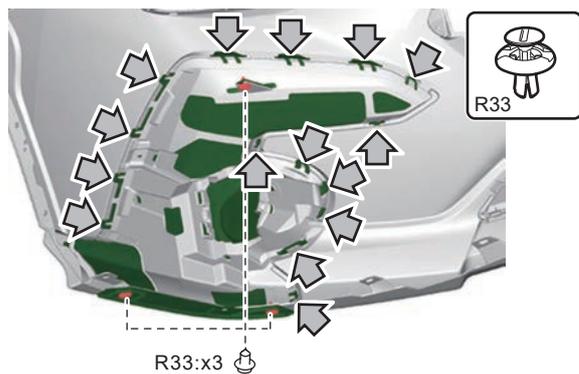



IMPREZA Model

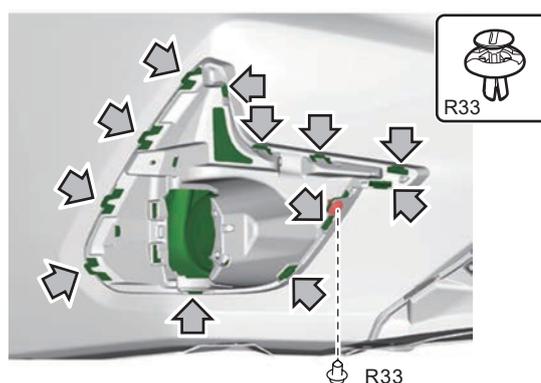


10

CROSSTREK Model

IMPREZA Model

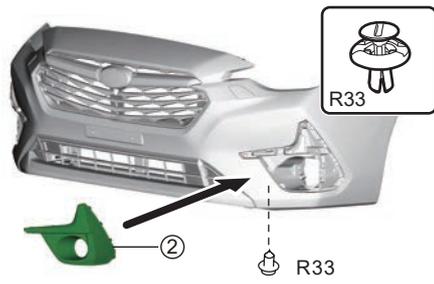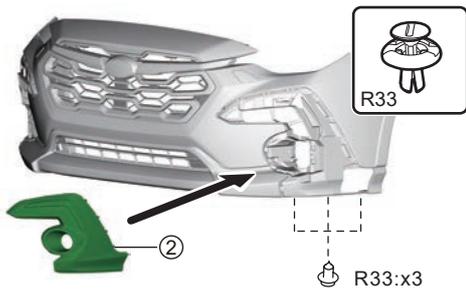


11

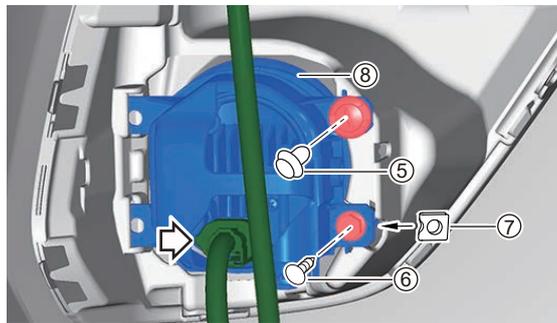

12

Install the front bumper in the reverse order of removal.

13

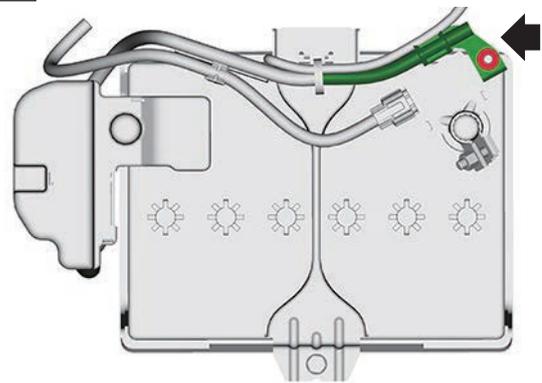

14

