

## 2015+ Ford F-150 Pillar Trim Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974  
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

**Please read all instructions before installation and to check to see that all parts are included.**


KIT CONTENTS:	
Description	Qty
Regular Cab Kit	4
Super Cab & Super Crew Kit	4

### Tools Required:

- Rubbing Alcohol
- Clean Towel

### Bucket Installation


1. Clean and dry the vehicle thoroughly.
2. The vehicle surface temperature must be a minimum of 15°C (60°F).
3. Apply rubbing alcohol to the clean towel and wipe down the entire boxed area shown in Figure 1. This will ensure proper adhesion to the vehicle. (Crew Cab driver side shown)

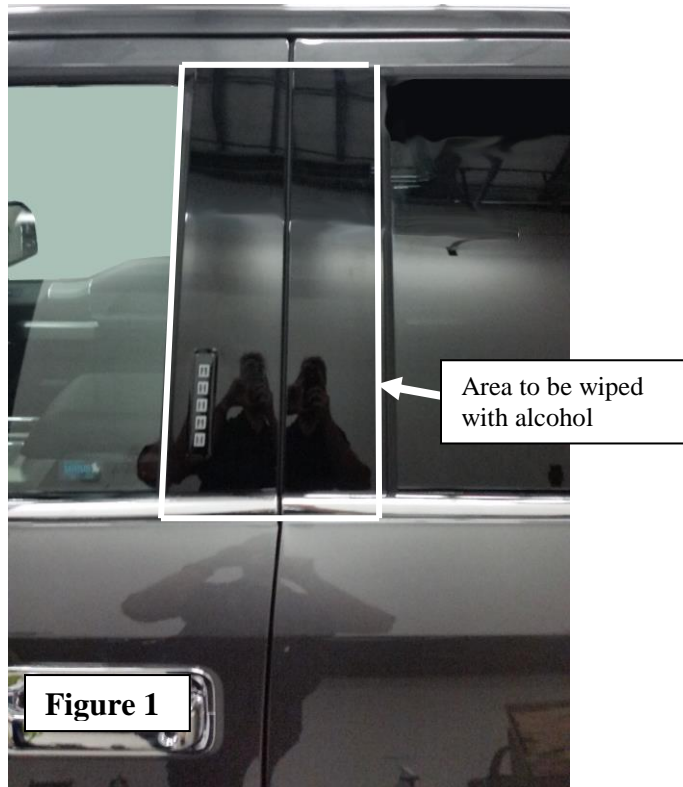

- Without removing the red backing, place the Driver Front pillar trim against the pillar as shown in Figure 2. Note how the keypad is centered in the hole and the pillar trim has about a 1/16" of the underlying pillar on either side framing it in.



- Pull the top 3" of the red backing off of the part and to the side as shown in Figure 3. Place the pillar trim back on the post to realign. **IMPORTANT: Do not to allow the adhesive surface of the panel to touch the vehicle prior to being in the correct location.** To prevent premature adhesion, place your fingers behind the part while aligning as shown in Figure 4.



6. Once the part is aligned, gently press the exposed adhesive part onto the vehicle, while maintaining alignment. Slowly pull the remaining red protective film downward until the film has been completely removed. Press the panel firmly onto the vehicle for 30 seconds to ensure proper adhesion. Refer to Figures 5 and 6.



7. Repeat steps 3 - 6 for each pillar.
8. Lastly, remove the white protective film to expose the finished material.



### Ford Licensed Accessories by Putco LIMITED WARRANTY

All Ford part numbers provided by Putco are warranted to be free from defects in materials or workmanship on products properly installed per the installation instructions provided with the product. This warranty covers repair or replacement of any defective product at no charge during the applicable warranty period listed below. Labor for replacement or service of defective product is not paid or reimbursed by Putco.

WARRANTY PERIOD		
	USA	Outside USA
Product which appears on the New Vehicle Monroney Label (window sticker)	3 years or 36,000 miles whichever comes first	3 years or 60,000 kilometers whichever comes first
Product not purchased at time of new Ford vehicle purchase	Whichever of the following two options is greater: 1) 2 years/unlimited mileage or 2) The remainder of the new vehicle warranty	Whichever of the following two options is greater: 1) 2 years/unlimited kilometers or 2) The remainder of the new vehicle warranty

This limited warranty does not cover any damage, defect or malfunction caused by misuse, abuse, accident, improper installation, modification, or improper or lack of maintenance. Incidental and consequential damages are not recoverable under this warranty. This warranty offers you specific legal rights. You may have additional or other rights as which vary from state to state or province to province.

If you experience a warranty issue with this product please visit your Ford dealer. If the repair is covered by the warranty above and completed by the dealership, labor is also covered -- Ford Warranty and Policy – Section 3.

Please note that Putco has replacement component parts available to assist consumers and dealers to resolve warranty and non-warranty issues as quickly as possible.

*Note to dealer:*

*Ford dealers should contact Putco by phone at 1-800-247-3974 or by email to: support@putco.com*